



BARKBLASTER INSTRUCTIONS

1. When opening the email make sure you are opening on your phone. Download the correct app for your phone manufacturer (Android is .apk and iPhone is .ipa) attached.
2. Turn on Bluetooth
3. Make sure the location settings for the app are set to “while using the app”, if this is marked as never, the app will not connect to the Bark Blaster.
4. Click Connect on the app, you will know you are connected to the Bark Blaster when the icon becomes a connected green chain link.
5. If the red broken chain link does not turn green, please review step 2, and 3.
6. Test the buttons on the app labeled Spray, and Tone and adjust the settings.
 - a. Sensitivity range—0-100—higher the # = greater sensitivity is meant for a dog with a lower volume bark, lower sensitivity is meant for a higher volume bark.
 - b. Barks = number of barks before the Bark Blaster is activated, tone first, then spray.

- c. Bark Time= For Example; If the Bark Time setting is 4 seconds, and the amount of barks is 3 barks and the dog only barks twice, the Bark Blaster will not be activated, pay attention to what pattern your dog barks, and set the Time and Number of barks to fit that.
- d. Spray Duration = The amount of time the spray will be activated. (When the dog becomes trained to the tone the spray time can be set to zero to eliminate the water feature). Recommend periodic activation to maintain training.
- e. Tone Duration =The amount of time the Tone will be active before the spray is activated.

The battery compartment is water resistant, not waterproof. Please ensure that there is no pooling of water at the base of the BARKBLASTER. Some best use practices would be to elevate the base or use a wooden board under the base to keep water from pooling.

The BARKBLASTER takes 4 D cell batteries and we recommend rechargeable batteries.